


BISONTE MTA400 SPARE PARTS LIST

Major components

PART NO.	DESCRIPTION	Price Euro without VAT
BZMTA400-001	Water Tank	
BZMTA400-002	Bearing&bracket,water tank	
BZMTA400-003	Handle lever	
BZMTA400-004	Bracket	
BZMTA400-005	Handle bar grip	
BZMTA400-006	Handle(pair)	
BZMTA400-007	Screw stem	
BZMTA400-008	Connecting stem	
BZMTA400-009	Protective frame	
BZMTA400-010	Rear Axle	
BZMTA400-011	Power pulley	
BZMTA400-012	Belt cover	
BZMTA400-013	Belt	
BZMTA400-014	Pulley	
BZMTA400-015	Engine	
BZMTA400-016	Base assy	
BZMTA400-017	Bearing&bracket(front)	
BZMTA400-018	Principal axis	
BZMTA400-019	Washer \varnothing 12mm	
BZMTA400-020	Big washer \varnothing 8	

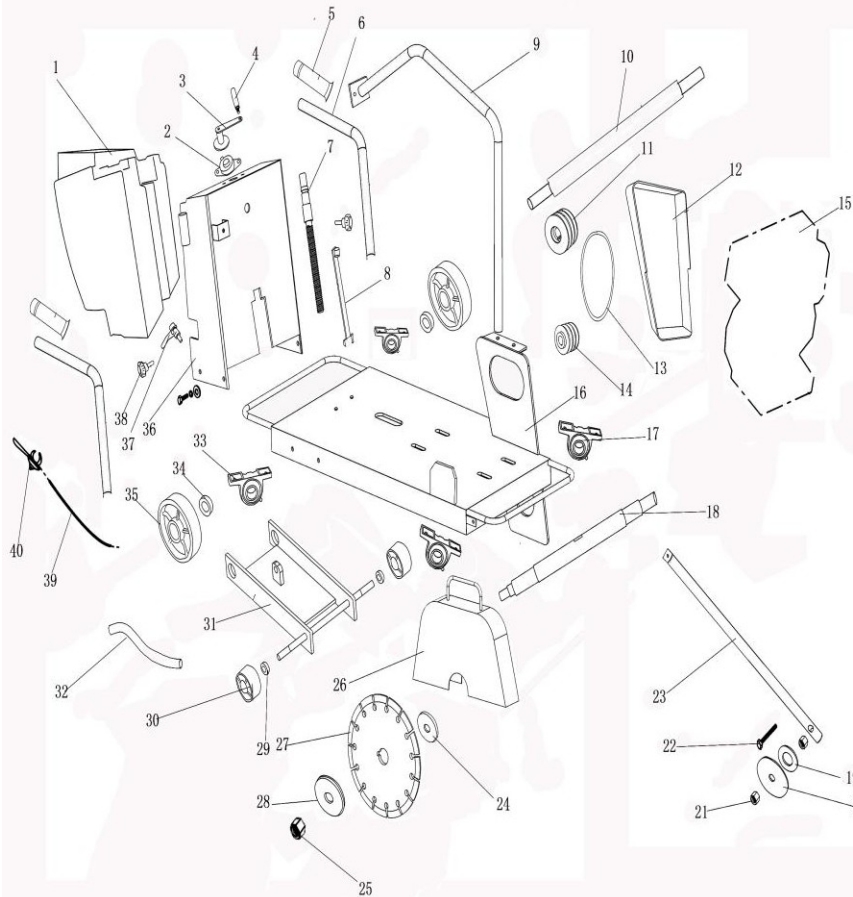

PART NO.	DESCRIPTION	Price Euro without VAT
BZMTA400-021	Nut	
BZMTA400-022	Screw	
BZMTA400-023	Pointer	
BZMTA400-024	Big gasket \varnothing 10	
BZMTA400-025	Nut	
BZMTA400-026	Blade guard	
BZMTA400-027	Blade	
BZMTA400-028	Blade flange	
BZMTA400-029	Bearing AK1714	
BZMTA400-030	Front wheel	
BZMTA400-031	Wheel rack module	
BZMTA400-032	Water pipe	
BZMTA400-033	Bearing&bracket(bac	
BZMTA400-034	Bearing6203-2RS	
BZMTA400-035	Rear Wheel	
BZMTA400-036	Fixed plate, water tar	
BZMTA400-037	Cock	
BZMTA400-038	Knob	
BZMTA400-039	Throttle cable	
BZMTA400-040	Throttle control	